

## TROUBLESHOOTING

If the flashlight flickers, works intermittently, changes modes automatically, appears dim or faded, or does not turn on, check and verify that:

- Each battery is fully inserted matching the polarity (+/-) on the battery holder.
- Each battery end is touching a metal contact in the battery holder.
- The battery holder contacts are clean and the springs are not bent sideways.
- The flashlight's inner spring is firmly attached and not bent.
- The battery holder is inserted into the flashlight with the positive (+) end first.
- The tail cap is twisted on tightly.

Firmly press the power button on and off several times:

- If the flashlight still does not turn on, replace the batteries.
- If the problem persists, contact GearLight for a replacement.

## MAINTENANCE

Inspect the flashlight monthly and carefully remove any damaged batteries and clean any corrosion. If the flashlight is used less than once a month, remove the batteries between uses. Lubricate all threads and rubber O-rings with petroleum jelly twice yearly.

## WARRANTY AND LIMITATION OF LIABILITY

### Limited One-Year Warranty

GearLight warrants this product for one year from the date of purchase against any defects in material or workmanship. This warranty does not cover normal wear and tear, nor damage resulting from misuse or neglect. We will, at our discretion, repair, replace, or refund the purchase price of this product should we determine it to be defective.

### Limitation Of Liability

Liability limited to the purchase price of this product. GearLight shall not be liable for any incidental or consequential damages or any implied warranty on this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

v2

 
Irvine, California | USA | [www.GearLight.com](http://www.GearLight.com)

# GEARLIGHT

## S1050 LED FLASHLIGHT

## User Manual

FOR YOUR SAFETY, READ BEFORE OPERATING

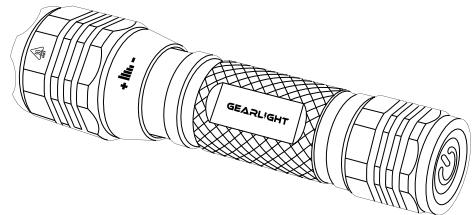


**IMPORTANT SAFETY NOTICE:** Lithium-ion batteries are potentially hazardous and can present a fire, explosion, and burn hazard. By using lithium-ion batteries, you agree that GearLight shall not be liable for any incidental or consequential damages arising from, relating to or connected with the use of lithium-ion batteries. If you do not agree with these conditions, please use only alkaline or NiMH rechargeable batteries.

### Package Contents:

 - 2x GearLight S1050 LED Flashlights
- 2x 18650 Battery Tubes (Batteries Are Not Included)
- 2x AAA Battery Holders (Inside Flashlights)
- 2x Lanyards
- 1x User Manual
- 1x Warranty Card


**WARNING:** To avoid eye injury, do not stare directly into the light beam or shine the beam directly into anyone's eyes. This product is not designed, intended, or recommended for children or hazardous environments.

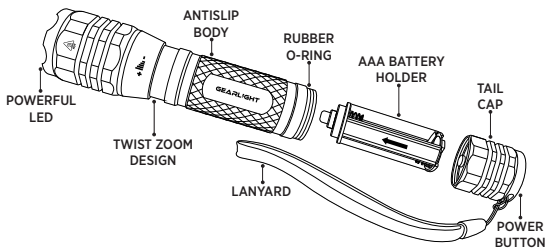

## GETTING STARTED

### AAA Battery Installation (See Warning)

 1. Unfasten tail cap and remove battery holder.
2. Insert three (3) AAA batteries following the correct polarity (+, -) marked on the battery holder.
3. Insert the battery holder into the flashlight with the positive (+) end first.



**WARNING:** Always follow the battery manufacturer's instructions as to the proper usage, handling, storage, and disposal of batteries. Use only batteries from a reputable manufacturer. Do not mix different brands or types of batteries in the same flashlight. Replace all batteries at the same time. Failure to follow safety instructions may result in personal injury and damage to property.

### 18650 3.7v Lithium-ion Rechargeable Battery Installation (See Warning)

1. Insert one 18650 battery (Fig. 1) inside the 18650 clear battery tube (Fig. 2).
2. Insert the combined 18650 battery and clear tube into the flashlight with the positive (+) end first.



 
**WARNING:** Lithium-ion batteries can present a fire, explosion, and burn hazard. Use only 18650 battery cells with a protection circuit produced by Panasonic, Sanyo, Sony, Samsung, or LG. Remove the battery when the flashlight is not in use. The use of other cell manufacturers or the failure to follow the battery manufacturer's safety instructions may result in fire, explosion, personal injury, and damage to property.

**CAUTION:** The flashlight may become warm or hot after extended periods of use at the highest setting. Select a lower setting when the flashlight is hot. This is typical for high-powered flashlights and does not cause damage to the flashlight.

## OPERATIONS

### On/Off

- To turn the flashlight on, press down firmly on the red power button located on the tail of the flashlight until you hear a click.
- To turn the flashlight off, press down firmly again until you hear a click.

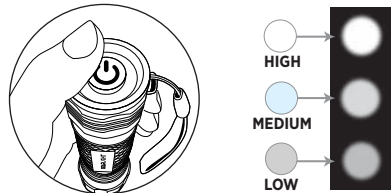

### Switching Modes

- There are 3 different lighting modes: HIGH, MEDIUM, LOW
- To switch through the 3 different lighting modes, gently press down on the red power button.
- The flashlight will switch to the next mode when turned off and on in quick succession. It will reset to high mode after being off for more than 10 seconds.

### Twist Zoom

1. Hold both ends of the flashlight; gently twist clockwise to extend and focus.
2. Twist the opposite direction for a broad dispersed light beam.

